



McKenzie House  
INTERIORS

## How to Measure Honeycomb Blinds

Decide whether you want your blinds to fit inside the window reveal or on the face of your window architrave (inside fit is neater but outside fit blocks out light better if you choose the blackout option). Then use the appropriate measuring guide below.

### **Some important specifications to consider before measuring:**

Minimum blind width: 300mm for standard blinds and 600mm for motorised  
Maximum blind width: 3500mm. For windows and doors wider than 3500mm, two or more blinds can be butted next to each other. In this case, please supply the overall reveal width as well as the width of each individual blind within it and state that these blinds butt together.

Minimum blind drop: 300mm


Minimum window reveal depth for inside fit: 38mm for standard and 80mm for motorised. Take care to look for mullions and window/door hardware that might get in the way when fitting or using the blind.

### **Inside Fit**

Measure the inside width of the window from wood to wood in three places – at the top, middle and bottom of the frame. Take the smallest measurement – **this is your overall width.**

Be exact and don't add or deduct anything. 5mm will be deducted during manufacture to allow the blind to move up and down smoothly.

Measure the inside drop of the window/door from wood to wood in three places – at the left, centre and right hand side of the frame. Do not add or deduct anything. Take the smallest measurement - **this is your overall drop.**

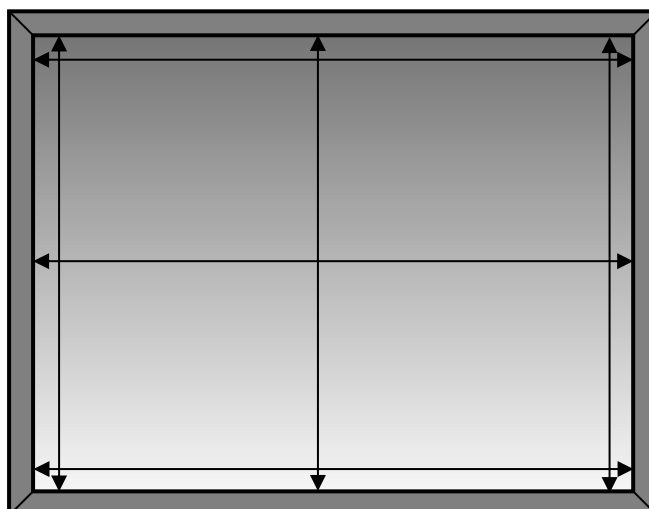

## **Outside Fit**

This fitting option can be used if there are catches or other hardware on the inside of the window/door reveal that will prevent the blind operating properly if fitted there or if the inside of the window/door reveal is not deep enough to accommodate the blind.

Outside Fit blinds should be fitted onto the architrave of the window/door.

Measure the width from outside edge to outside edge of the window/door architrave. Measure in 3 places across the opening and write down the largest measurement. **This is your overall blind width. No factory deductions will be made.**

Measure the drop from outside edge to outside edge of the window/door architrave. Measure in 3 places across the opening and write down the largest measurement. **This is your overall blind drop. No factory deductions will be made.**

