



McKenzie House
INTERIORS

How to Measure Timber & PVC Venetian Blinds

Decide whether you want your blinds to fit inside the window reveal or on the face of your window architrave or wall (inside fit is usual and most recommended). Then use the appropriate measuring guide below.

Some important specifications to consider before measuring:

Minimum blind width: 250mm (tilt only – blind cannot be raised and lowered)

Maximum blind width: 2400mm

For windows and doors wider than 2400mm, two or more blinds can be butted next to each other. In this case, please supply the overall reveal width as well as the width of each individual blind within it. State that these blinds butt together.

Maximum blind drop: 3000mm (but restrictions apply on blinds over 1300mm wide).

Minimum window reveal depth for inside fit: 78mm


Take care to look for mullions and window/door hardware that might get in the way when fitting or using the blind.

Inside Fit

Measure the inside width of the window from wood to wood in three places – at the top, middle and bottom of the frame. Take the smallest measurement - **this is your overall width**.

!! Be exact. Do not add or deduct anything – a small factory deduction will be made during manufacture to allow the blind to move up and down smoothly.

Measure the inside drop of the window from wood to wood in three places – at the left, centre and right-hand side of the frame. Do not add or deduct anything. Take the smallest measurement - **this is your overall drop**.

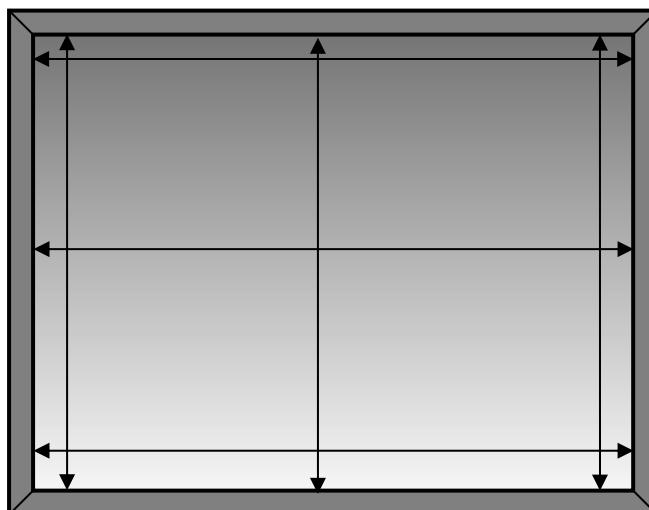

Outside Fit

This fitting option can be used if there are catches or other hardware on the inside of the window/door reveal that will prevent the blind operating properly if fitted there or if the inside of the window/door reveal is not deep enough to accommodate the blind.

Outside Fit blinds should be fitted onto the window/door architrave.

Measure the width from outside edge to outside edge of the window/door architrave. Measure in 3 places across the opening and write down the largest measurement.

This is your overall blind width.

Measure the drop from outside edge to outside edge of the window/door architrave. Measure in 3 places across the opening and write down the largest measurement.

This is your overall blind drop.

